
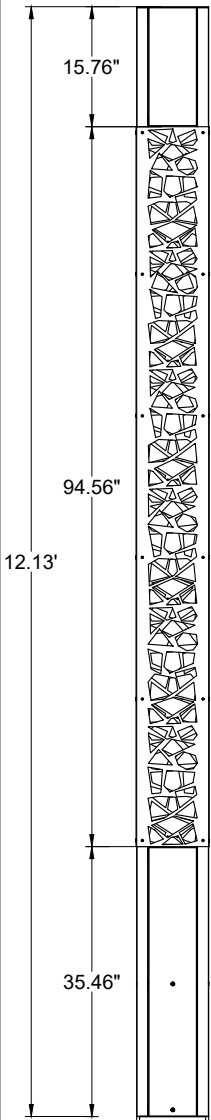


INSTALLATION AND SERVICE MANUAL

For Installation of Vancouver 20, 21, 22, 23 Light Column RGBW.
Model. UVA-20151,UVA-20161,UVA-20171,UVA-20181

 
PRODUCT DRAWING (DIMENSIONS)

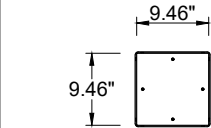

SUITABLE FOR WET LOCATIONS



UVA-20151




UVA-20161



UVA-20171



UVA-20181

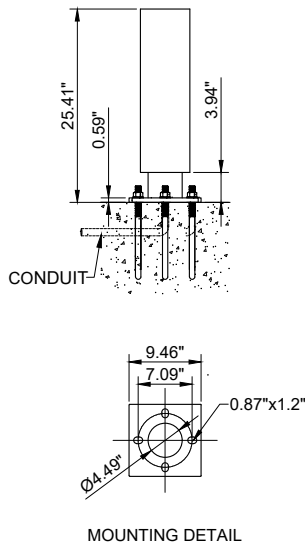

MOUNTING DETAIL



UVA-20161




UVA-20171




UVA-20181

①

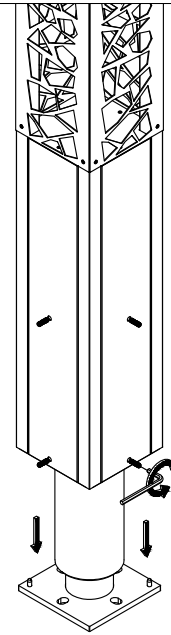

②



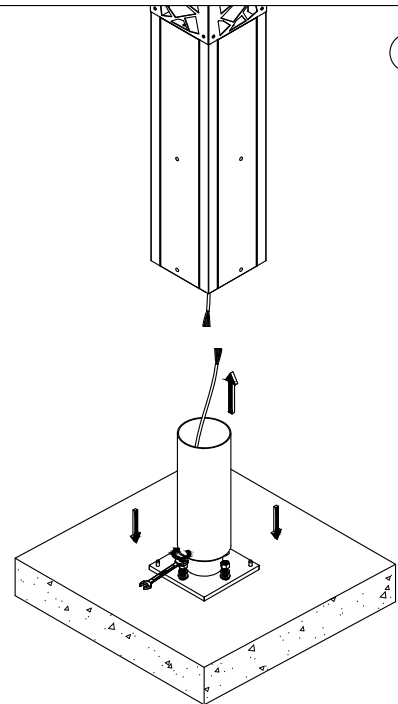


Notice to installer :

- 1.WIRING INSTRUCTIONS** Warning : RISK OF FIRE AND ELECTRICAL SHOCK. : FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY>FIXTURE IS INTENDED FOR INSTALLATION IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE, LOCAL AND FEDERAL CODE SPECIFICATIONS. DISCONNECT POWER BEFORE SERVICING.
- 2. This fixture has a VOLTAGE SPECIFIC BALLAST,Check that the supply voltage is the same as the installed ballast voltage.**

Ligman Lighting USA

7144 NE Progress Court, Hillsboro
Oregon, 97124, USA
Tel : 503 645 0500 | Fax : 503 645 8100

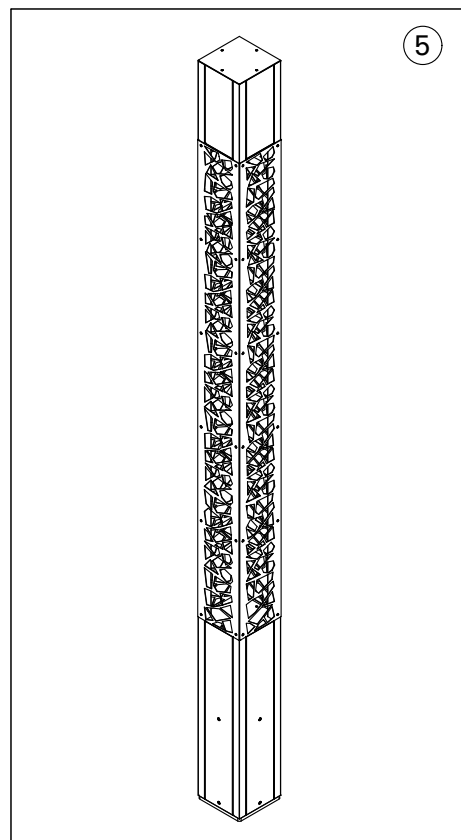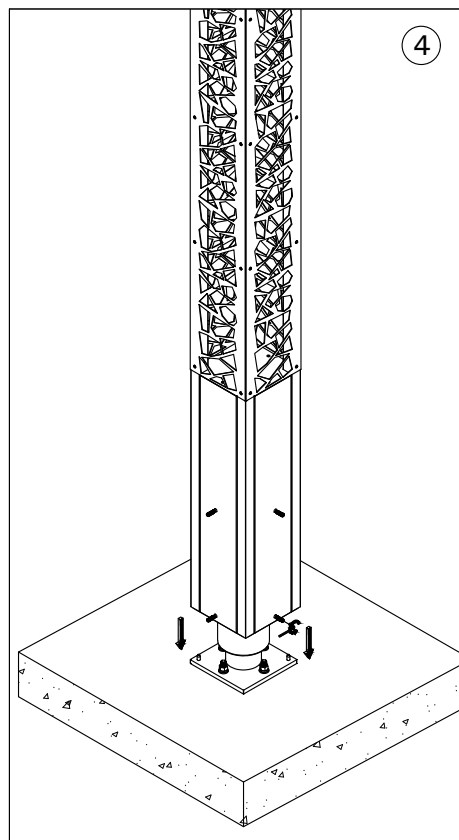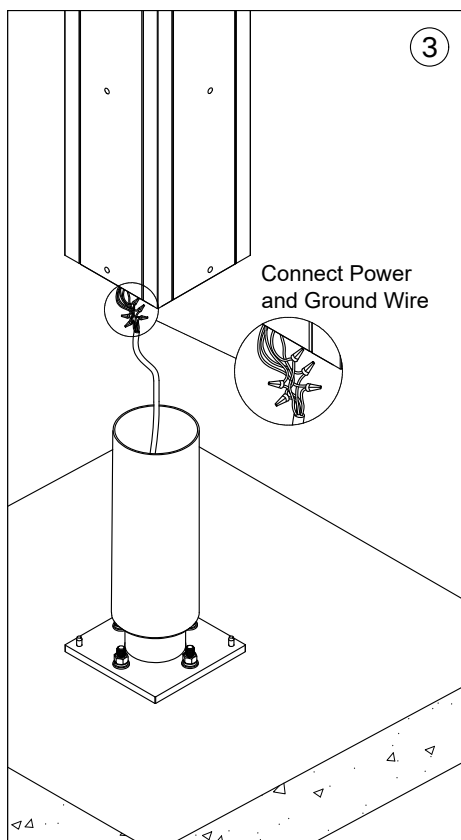

WIRING DIAGRAM RGBW SYSTEM

